saige

ENGINEERED FOR THE OUTDOORS

INSTALLATION QUICK GUIDE

RANCH STYLE FENCING

RANCH STYLE FENCING INSTALLATION QUICK GUIDE

saige ENGINEERED FOR THE OUTDOORS

Tools & Safety Information

No specialist tools are required when working with Saige composite products. However for the best results, we recommend using carbide tipped blades when using a mitre saw, we recommend a 10"-12" saw blade with 30 teeth or less. Saw blades with fewer teeth stay cooler and last longer.

If using a power tool, we advise to adjust the tool so that the screws are not over tightened. Take normal safety precautions when working with timber products. Wear gloves to avoid splinters and a nose and mouth mask when cutting to avoid the inhalation of dust.

Always wear goggles (and ear protection) when using circular saws, drills or sanders and always use an RCD device when using any power tools outside.

Tools you may required:

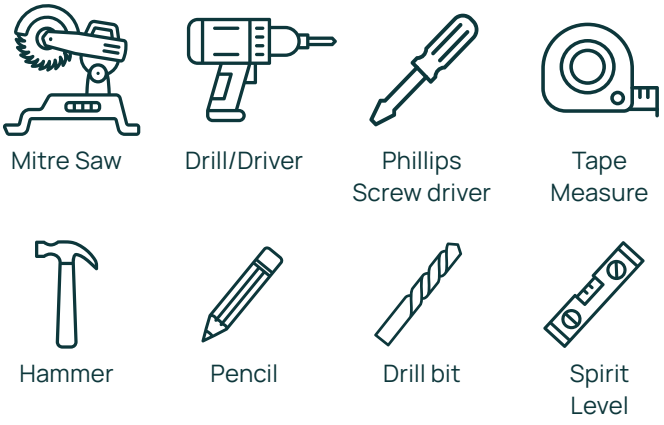

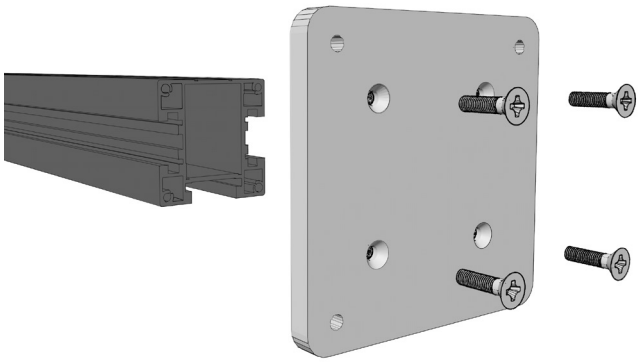

1. Attach base to post with M8x80 fixing screws (ordered separately).

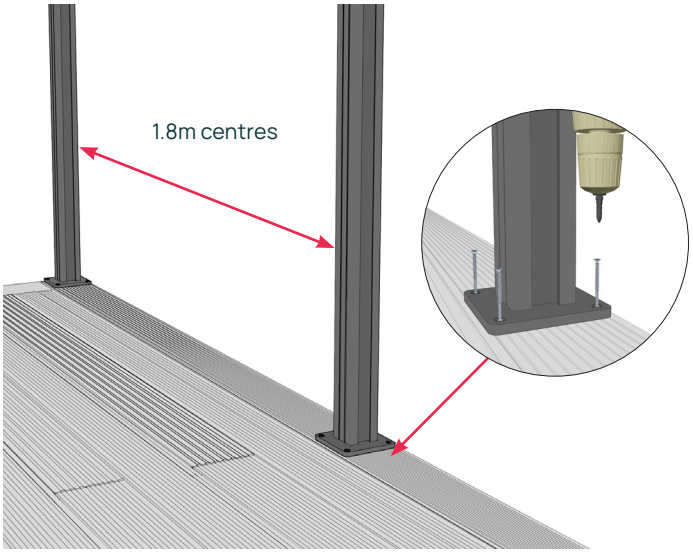

2. All posts with base plates must be secured to a solid surface at 1.8m centres apart. Ideally this should be fixed through a decking board directly to the subframe (fixings ordered separately).
Note: If fixing through solid Saige Decking Boards pre drill all holes.

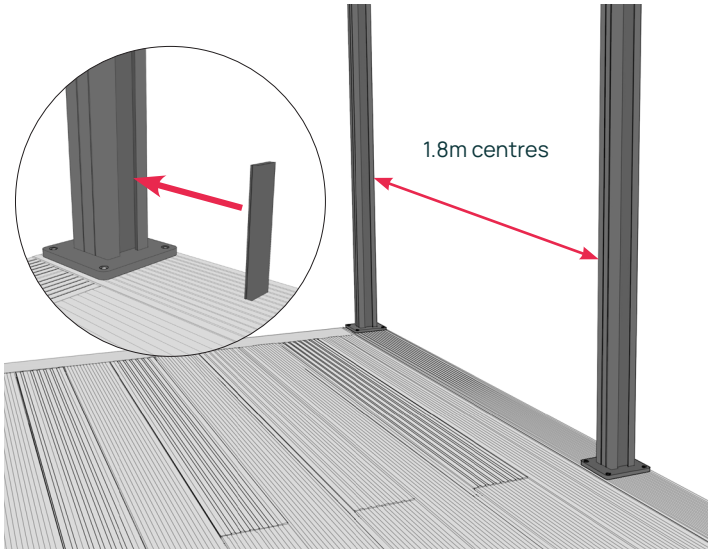

3. Cut down long insert to desired height and insert into each post. At this point install optional skirts if using.

RANCH STYLE FENCING INSTALLATION QUICK GUIDE

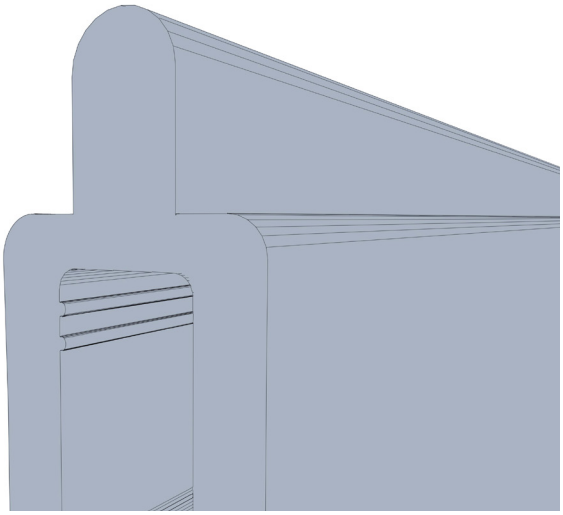

4. When inserting the fencing panels make sure they are all front facing. The front can be identified by ensuring the two raised notches on the inside of the top cutout are facing forwards.

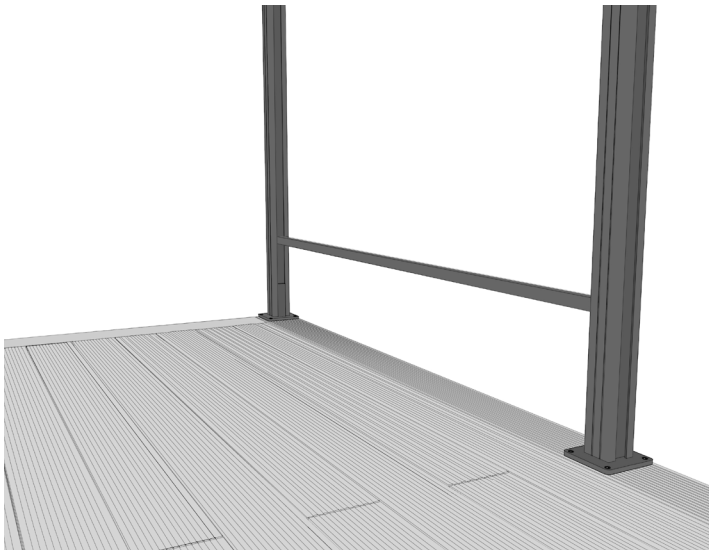

5. Slide the bottom rail down the channel in the fence post.

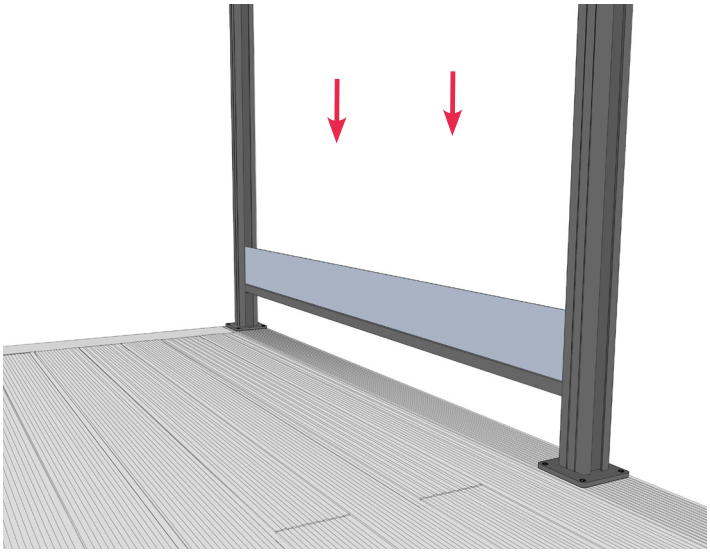

6. Insert fencing panels. Make sure the identifying rib is facing the front. Continue inserting fencing boards until you have reached your desired height.
Note: Make sure the fence panels are seated together correctly.

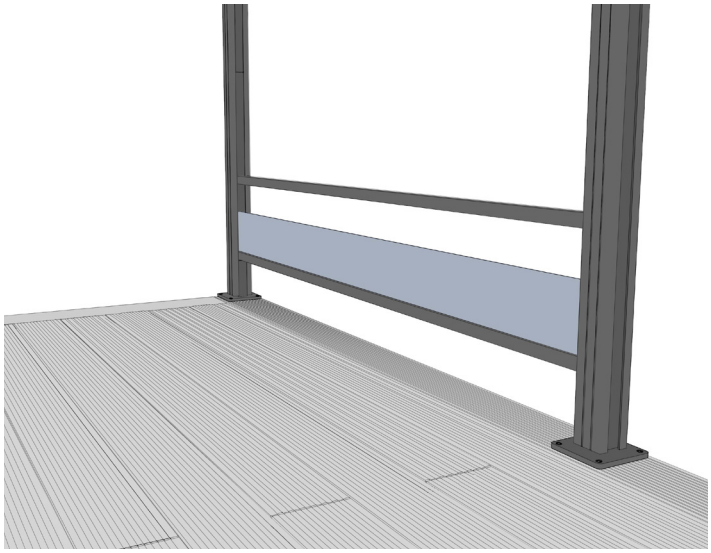

7. When you have reached your desired height insert the top rail.

RECYCLED MATERIALS SPLINTER FREE BRITISH DESIGN ANTI-SLIP
100% QUALITY INSPECTED LOW MAINTAENANCE FIRE-RESISTANT OPTIONS

SUBFRAME • DECKING
FENCING • GATES • BALUSTRADE

RANCH STYLE FENCING INSTALLATION QUICK GUIDE

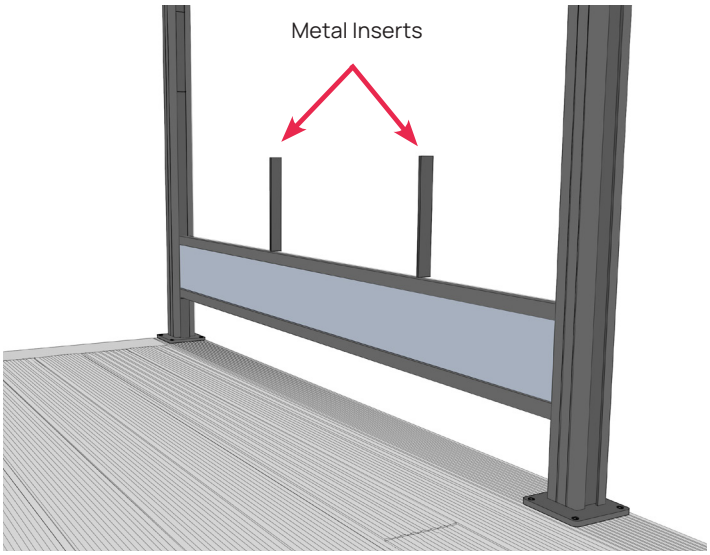

8. Add sections of the metal insert to both posts to stop the top rail being able to move. Cut the inserts to the height you require for your desired gap.

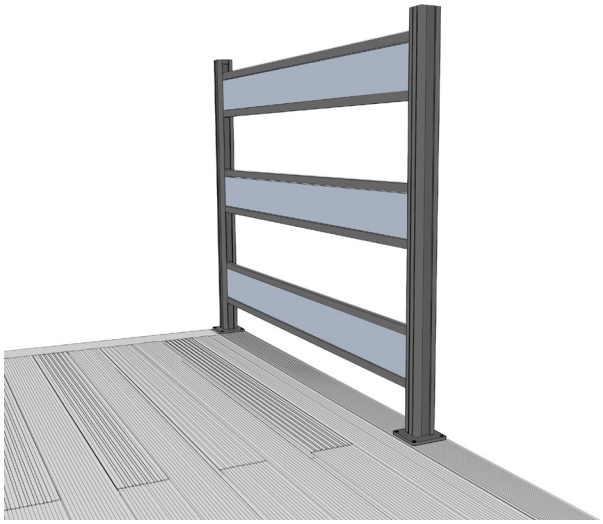

9. Repeat the process to add the next sections.

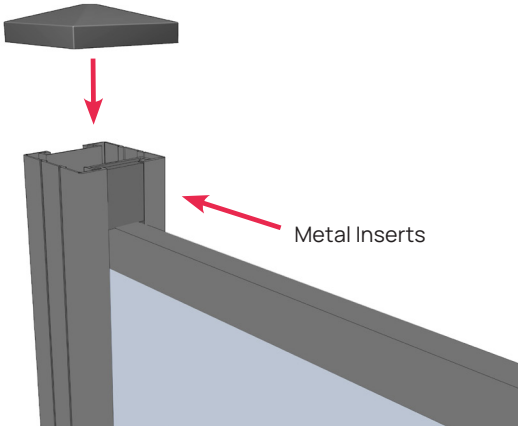

10. Add final metal insert and post cap.

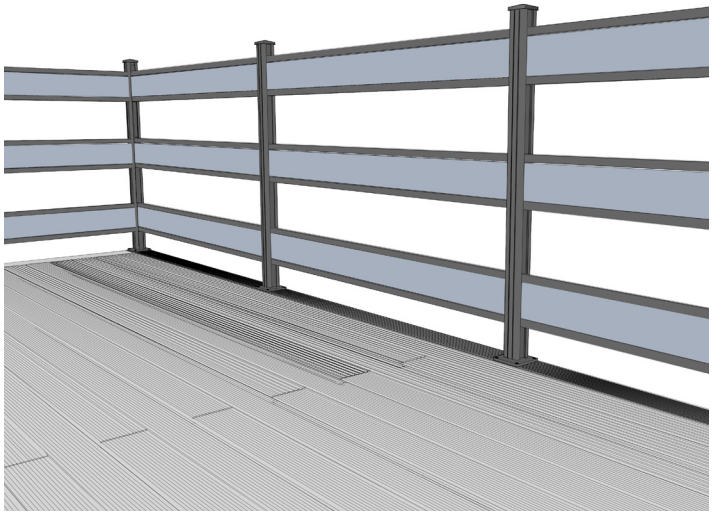

11. Repeat process until ranch style fencing is complete.

RECYCLED MATERIALS SPLINTER FREE BRITISH DESIGN ANTI-SLIP
100% QUALITY INSPECTED LOW MAINTAENANCE FIRE-RESISTANT OPTIONS

SUBFRAME • DECKING
FENCING • GATES • BALUSTRADE

RANCH STYLE FENCING
INSTALLATION QUICK GUIDE

saige ENGINEERED FOR THE OUTDOORS

Image	Quantity per bay	Product Description	Dimensions	Weight
3 Board Ranch Fence (can be sunk in the ground or fixed using baseplates)				21.75kg
	1	1. 1540mm post	70mm x 70mm x 1540mm	4.8kg
	1	2. Post cap		
	1	3. 1540mm Insert		
	1	Bottom Rail	1748mm x 30mm x 20mm	0.8kg e.a.
	1	Top Rail	1748mm x 30mm x 20mm	0.7kg e.a.
	1	End Rail Pre installed into top and bottom rail	25mm x 24mm x 2mm	0.02kg
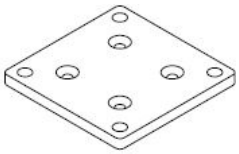	1	Baseplate (if not sinking into the ground)	130mm x 130mm x 10mm	2.5kg
	1	Additional bolts to attach baseplate to post	M8 X 80mm - 1 pack of 4 (Ordered separately)	0.105kg
	2	1155mm Insert	1155mm	0.4kg e.a.
Fence boards				
	3	FSC® 100% Composite Fence boards	145mm x 1755mm x 19.5mm	3.85kg e.a.
Additional finishing post, baseplate, and optional parts				
	1	Additional post kit	70mm x 70mm x 1540mm	4.8kg
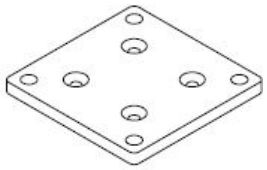	1	Additional baseplate	130mm x 130mm x 10mm	2.5kg
	1	Additional bolts	M8 X 80mm - 1 pack of 4	0.105kg
	1	Optional skirt	137mm x 20.5mm	0.15kg

RECYCLED MATERIALS SPLINTER FREE BRITISH DESIGN ANTI-SLIP
100% QUALITY INSPECTED LOW MAINTAENANCE FIRE-RESISTANT OPTIONS

SUBFRAME • DECKING
FENCING • GATES • BALUSTRADE