SOLID DECKING INSTALLATION QUICK GUIDE

Note: This is a quick reference guide only - please read the full Solid Decking Installation Guide prior to commencing installation of Saige's Solid Decking.
The countersinking tool is provided for the decking boards.

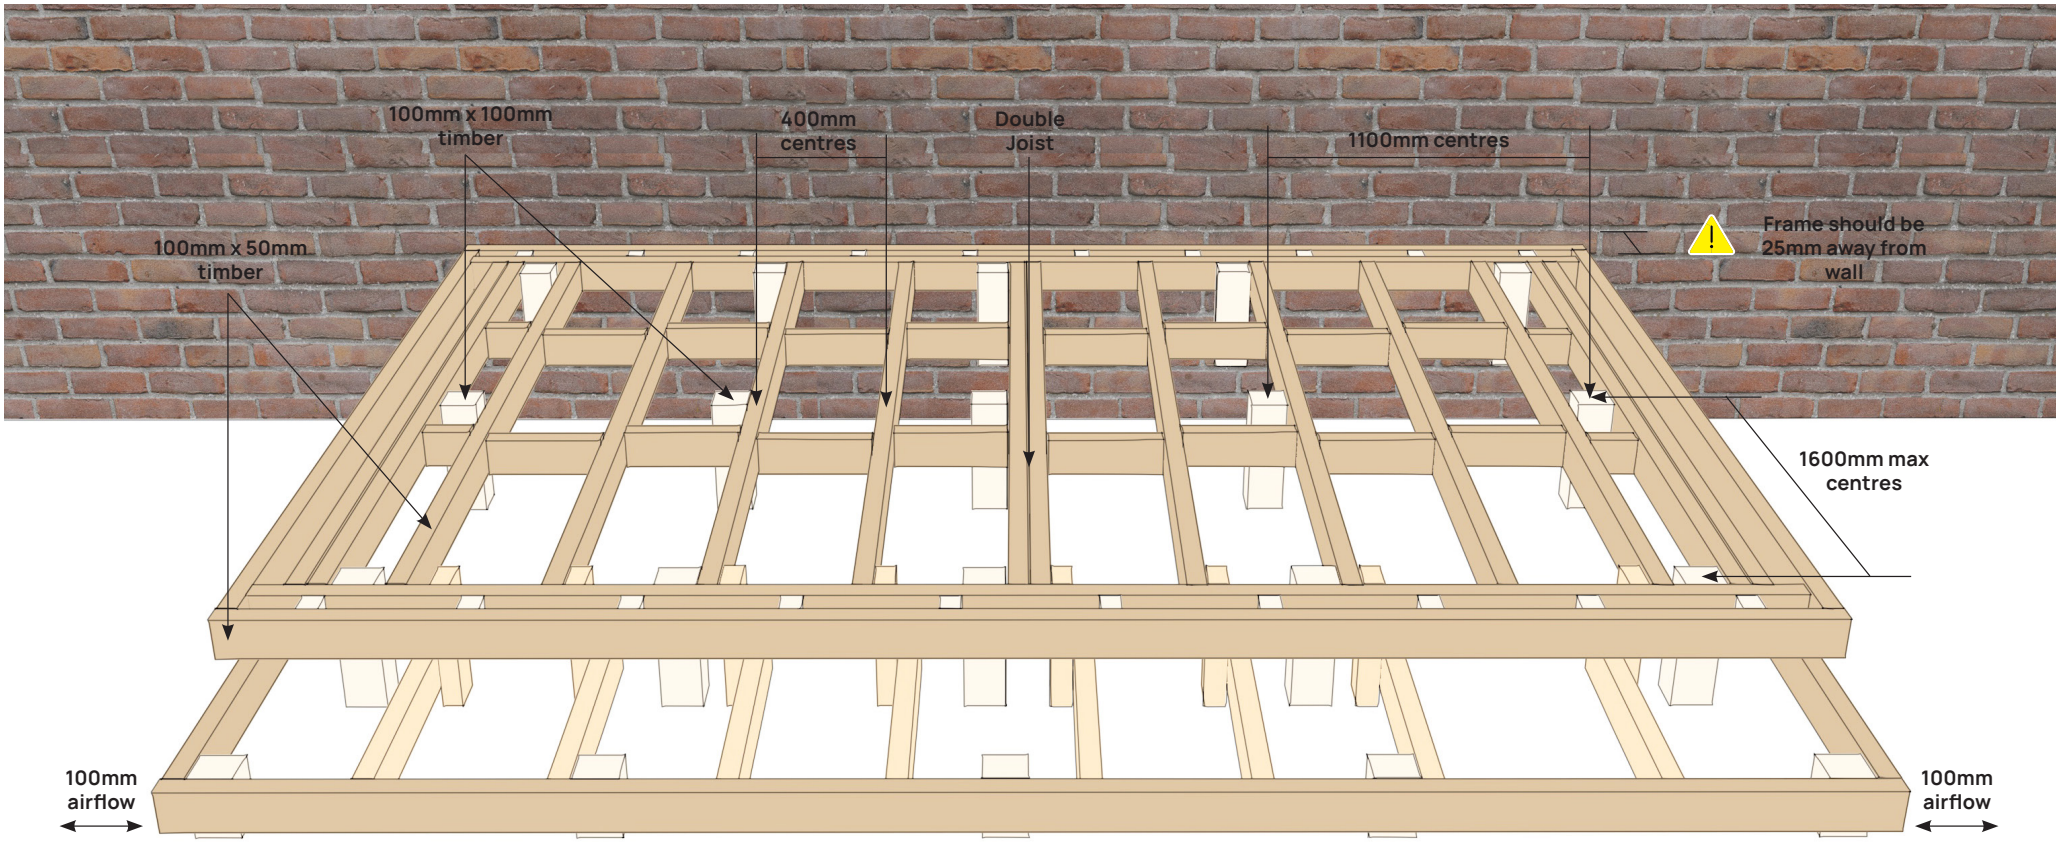

Step

Note: Add Saige Deck Tape to protect subframe (65mm for single joists and 130mm for double joists).

Saige provide an aluminium subframe system which has been design to be used with our Decking boards. Visit our website or contact your distributor for more details.

SOLID DECKING INSTALLATION QUICK GUIDE

saige ENGINEERED FOR THE OUTDOORS

Tools you may required:

Mitre Saw

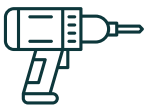
Drill/Driver

Phillips Screw driver

Tape Measure

Hammer

Pencil

4.5mm drill bit

Spirit Level

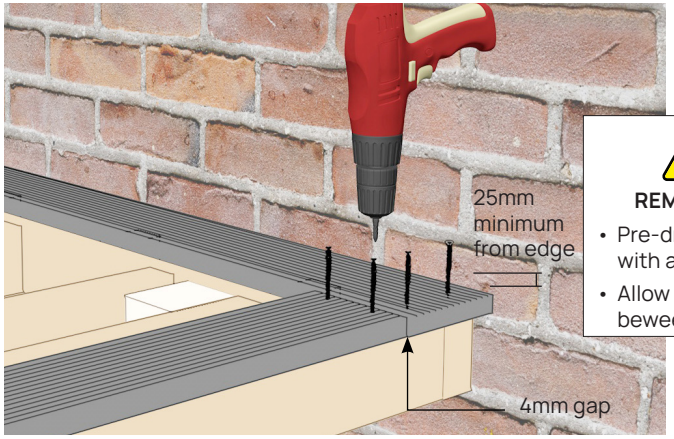

REMEMBER
- Pre-drill all holes with a 4.5mm drill
- Allow 4mm gap beween boards

1. Use Saige colour coded decking screws to fix solid outer boards in place, using countersink tool after predrilling.
Note: allow 4mm gap between end of board and side of next board (as per image)

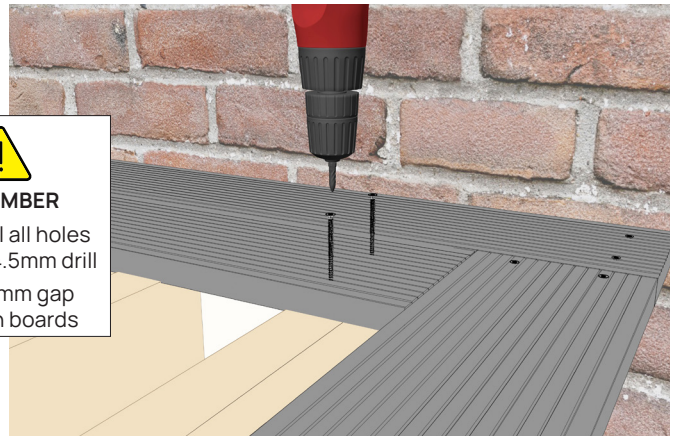

2. Then fix two screws to base frame at every joist, minimum 400mm along the length.
Note: Allow 4mm gap between boards

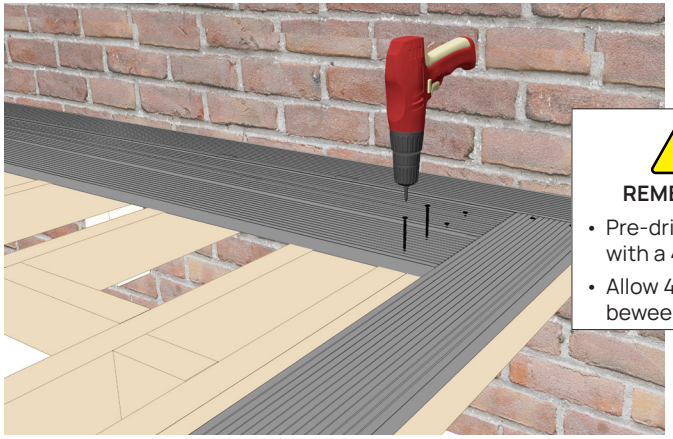

REMEMBER
- Pre-drill all holes with a 4.5mm drill
- Allow 4mm gap beween boards

3. Repeat step 2 until area is complete. Making sure any joins are over double joists or support. Allow a 4mm gap between each board. End-to end gaps (butt joints) should be a 4mm gap min.

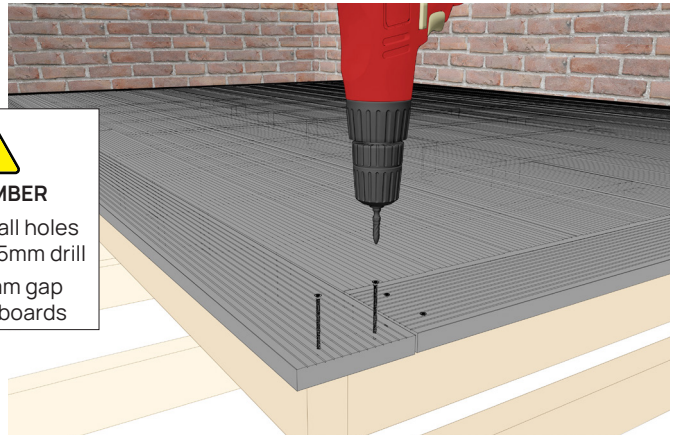

4. Fix outer solid edge board in place using Saige colour coded decking screws. Fix boards every 400mm along length into joists.

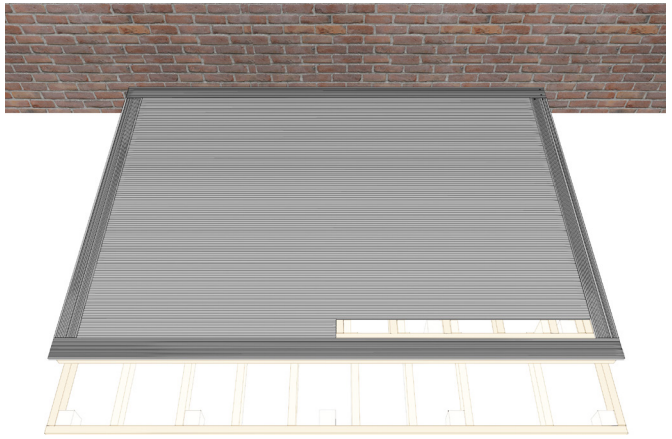

5. If the join is not over a double joist an extra noggin should be added to base frame for secure fixing point.

SOLID DECKING INSTALLATION QUICK GUIDE

saige ENGINEERED FOR THE OUTDOORS

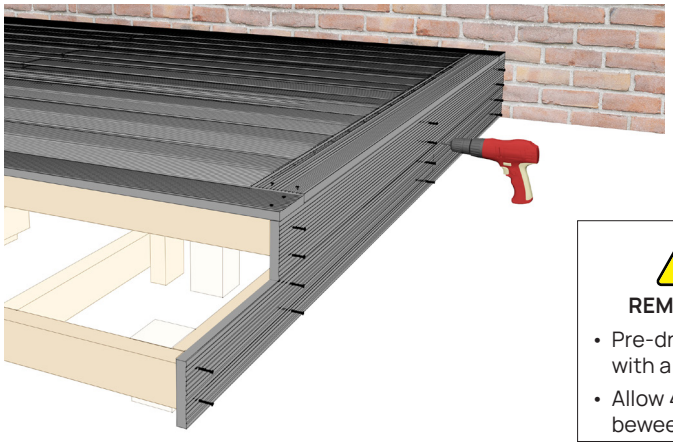

6. Sides Screw the solid side decking boards in place using Saige colour coded decking screws. Add extra joists for fixing if necessary.

REMEMBER

- Pre-drill all holes with a 4.5mm drill
- Allow 4mm gap beween boards

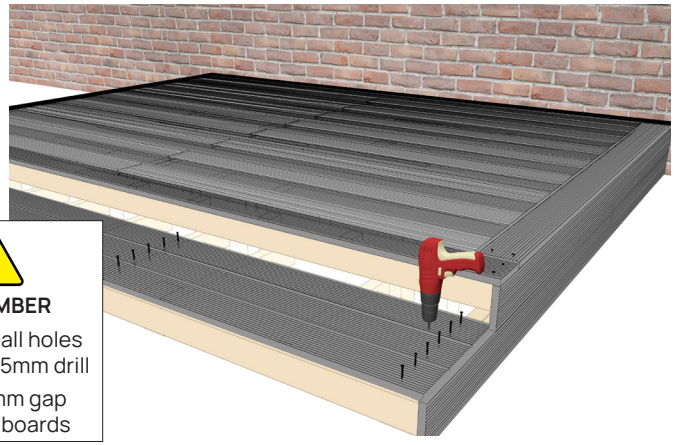

7. Steps Fix step boards in place with Saige colour coded screws. Add extra joists for fixing if necessary.

8. Repeat steps 7 until you have completed step tread.

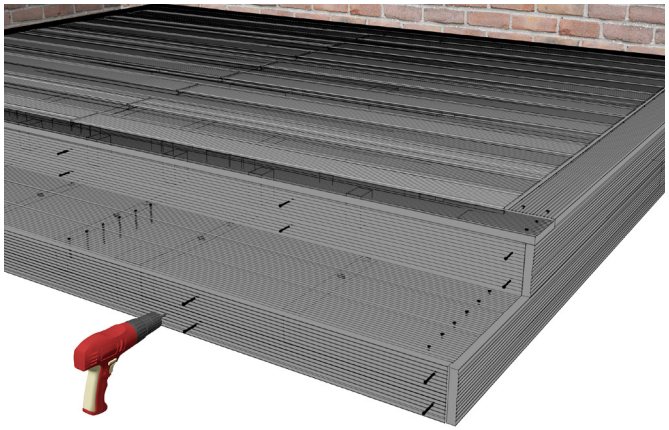

9. Screw step risers in place using Saige colour coded decking screws. **Note:** Saige will always recommend using solid boards for any steps or edging.

10. Finally clean Saige decking with a pressure washer immediately after installing to remove all residue and dirt from installation to avoid any staining or inground marks being left on the decking